

## Tuning your DSTV box for LM Radio

Follow these instructions to tune your DSTV decoder to receive the free to air LM Radio transmissions on the View Africa Network satellite bouquet.

**NOTE:** PVR and HD PVR decoders cannot be programmed for free to air channels. In which case you should use an older DSD or a separate free to air receiver. You do not need an active DSTV subscription to receive free to air channels.

**Note:** If at any time you make a mistake or the decoder "hangs up" you can revert to the factory default settings by selecting the 'restore default settings' on the dish installation menu and pressing OK.

Press 'MENU' on the remote control

Use the arrow buttons to scroll down to 'Advanced Options' - press OK

Scroll to 'Dish Installation' press OK - Enter PIN number 9949

**You will be entering a new (alternative) satellite ID in addition to the DSTV network.**

Scroll down to **Network 2** - use the left-right arrow buttons to select 'Other'

Select satellite by using left-right arrows - ASTRA 2 then press OK

Scroll down to '**Frequency**', press 'OK' and enter **12682**, then press OK

Scroll down to '**Symbol Rate**', press 'OK' and enter **26657** then press OK

Scroll down to '**FEC**', then use the left-right buttons to select **1/2** then press OK

Scroll down to '**Polarisation**', use left-right buttons to select '**Horizontal**' press OK

Scroll down to '**Use NIT**', use left-right buttons to select 'No' press OK

Scroll down to '**Accept Displayed values**', press OK

Scroll down to '**Scan Networks**' press OK

The decoder will then rescan all networks. This takes a while. When the scanning has completed the decoder defaults to channel 100 - the guide channel. You may need to remove the power and let the decoder rescan from cold start after Multichoice has sent one of their periodic over air upgrade to the decoder.

Press the **TV** button on the remote, scroll down - ASTRA 2 should be one of the choices just above the Public menu item, then press OK. If ASTRA 2 does not appear in the drop down menu, then it may be necessary to try changing the **LNB Hi Frequency**. Certain DSTV boxes have the LNB Hi Frequency set to **10700 MHz** whereas many LNBs (dishes) use a High Frequency of **10600 MHz**. Because DSTV does not use the high band the Hi Frequency may not necessarily be properly set in your receiver. The two possible values are **10600** and **10700**.

Go to dish installation press OK and enter PIN number 9949, then scroll to **Network 2** select OK

Scroll down to **LNB Hi Frequency**, press 'OK' and enter **10600**, then press OK

Scroll down to **Accept Displayed values**, press OK - then **Scan Networks** again.

Note: On some older DSTV decoders instead of changing the **LNB Hi Frequency** you can "fool" the decoder into receiving by setting the '**Frequency**' to **12782** (instead of 12682).

To access LM Radio, on the original remote control press the musical note (radio) button

To access LM Radio, on the newer DSD1110 or 1131 remote press the '**SHIFT**' (green button) then TV.

